

Tone
piano/
Organ

Performance

Melody
Performance

Play
your
heart
out

Melody
Guide

© Takeuchi Naoko Kodansha TV Asahi Toei Animation
PRETTY SOLDIER SAILOR MOON
Sailor Stars
Karaoke Melody
Moonlight Densetsu
Sailor Star Song

SALTOR MOON

JESUS LOVES ME	FIRST NOEL	JOY TO THE WORLD	JINGLE BELLS	LONG LONG AGO	LORELAI	TWINKLE TWINKLE LITTLE STAR	LONDON BRIDGE
-------------------	------------	---------------------	-----------------	------------------	---------	--------------------------------	------------------

MAX
VOLUME
OFF

MIC



Tone
piano/
Organ

Musical
Performance

Melody
Performance

Play
your
heart
out

Melody
Guide

© Takeuchi Naoko Kodansha TV Asahi Toei Animation
PRETTY SOLDIER SAILOR MOON

 
Karaoke Melodies

Sailor Stars

Moonlight Densetsu

Sailor Star Song

AGES 3 AND UP



Pretty Soldier Sailor Moon
Sailor Stars



Play the new "Sailor Stars Song" and "Moonlight Desentsu" or do a karaoke sing-along with this cute keyboard guitar!

SAILOR STARS

KEYTAR PLAYSET



ほんしよろ べつり
SP)4本使用(別売り)
連続約240分

Pretty Soldier Sailor Moon

Sailor Stars



Let's be a sailor band!
sing along with these
cheerful melodies!

SAILOR STARS

PLAY KEYTAR

KEYBOARD LIGHTS UP WHILE YOU PLAY!
FROM NOW ON,
YOU AND YOUR FRIENDS ARE IN A SAILOR BAND ♡





KEYBOARD LIGHTS UP WHILE YOU PLAY!

FROM NOW ON,

YOU AND YOUR FRIENDS ARE IN A SAILOR BAND 





Let's be a sailor band!
Sing along with these
cheerful melodies!



BANDAI PLAS MADE IN PHILIPPINES

Please do not reproduce the illustrations or pictures on this packaging.



Pictured dress,
accessories, and
microphone not
included. batteries
not included.

© Takeuchi Naoko / Kodansha / TV Asahi / Toei Animation
Sailor Stars

For ages 3 and up



Takes 4 AA sized batteries, part of a 3 piece set (other items not included).
Continual play time of up to 240 minutes.

**SAILOR STARS
PLAY KEYTAR**



 
SAILOR STARS PLAY KEYTAR

<HOW TO PLAY>

COPYRIGHTED TO JASRAC JAPANESE MUSIC ASSOCIATION T-620163


1 POWERING IT ON

- On the reverse side of the keytar, please open battery latch.
- Insert the batteries in the order illustrated below.

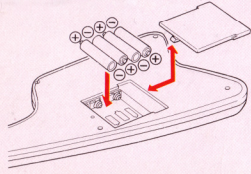

2 SWITCH THE POWER ON

- Slide the volume roller all the way up into the "on" position. To turn it off, slide the roller all the way down as if you are decreasing volume.

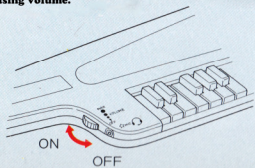

3 KARAOKE

- Select either position 7, "Sailor stars song", or 6 "Moonlight Densetsu", and the melody should begin to auto-play. If you would like to stop mid-song, slide the volume roller to the "off" position.
- Before the song begins, the instrument will give you a heads up by shouting out "Let's sailor band!", please be aware.
- For microphone play: Insert microphone accessory pin into the jack as illustrated below for more karaoke fun.
- During karaoke play, you can not select any of the melody play modes.

TRY SINGING THE "SAILOR STARS SONG" AND "MOONLIGHT DENSETSU" TRACKS AS BEST AS YOU CAN!

5 MELODY GUIDE

- Hit button 5 to activate melody guide mode.
- Select a melody from section 8 (songs A-H).
- Hit the keys as they light up to play the melody. If you hit keys that are not lit up while in this mode, no sound will play.

HIT THE KEYS AS THEY LIGHT UP TO PLAY A SONG!



6 PLAY YOUR HEART OUT!

- Select button 4 for play your heart out mode.
- Select a song from section 8, A-H. Try to play along with the melody you've selected all on your own.
- Key will light up when you press the correct key in sequence for the melody.

SHOCK EVERYONE WITH YOUR SKILLS!


● SOUND QUALITY CAN SLIGHTLY VARY BETWEEN FUNCTION MODES, BUT THIS IS NOT A MALFUNCTION

WARNING Parents please read

- Please do not allow your child to swallow small parts or batteries.
- Do not play wildly with the strap around your neck.
- Make sure your child is the appropriate age to avoid accidental ingestion and strap accidents. (swallowing batteries may lead to ruptures and internal bleeding, please be very careful)
- Do not use nickel batteries.
- Do not mix new and old batteries.
- Be sure the plus and minus ends align correctly.
- A short circuit may occur, please do not disassemble to charge, heat or allow fire inside the toy.
- Please turn the toy off after playing every time.
- Please do not smash or throw the toy.



MELODY SWITCH

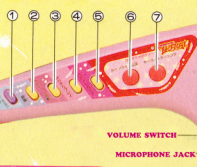

4 MELODY AUTO-PLAY MODE

- Select auto-play mode (button 3).
- Each of the keys are lettered (see section 8), and hitting one will activate play of the corresponding song as labelled. If you would like to interrupt self-play while in sequence, move the volume slider into the off position.

8 MELODIES AVAILABLE FOR AUTO-PLAY MODE

DO RE MI FA SO LA TI DO

SONG GUIDE	KEY	SONG NAME
A	JESUS LOVES ME	FIRST NOEL
B	JOY TO THE WORLD	JINGLE BELLS
C	LONG LONG AGO	LORELAI
D	TWINKLE TWINKLE LITTLE STAR	LONDON BRIDGE

 
7 PERFORMANCE

- Select button 2 to go into performance mode. keys will light up as you play them.
- Keys will not light up red like in other modes.
- There is no guide to tell you if notes are correct or not.

THE LIGHT UP KEYBOARD IS SO MUCH FUN!!

8 STRAP

- Strap can be lengthened for your comfort. Please use safely.
- For your safety, you have to push the strap insert into place with great force. please be sure it is properly seated before using

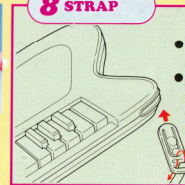

YOU CAN SELECT EITHER PIANO OR ORGAN TONES

9 SELECTING A MUSIC TONE

- Can be used in auto-play mode, melody guide mode, and play your heart out mode. When doing performance mode, hit button 1 once for organ mode, twice for piano mode.
- During karaoke mode, you can not toggle between options

(関東) 柏市豊四季241-22 ☎277 ☎0471-46-0371
 (関西) 大阪市北区豊崎4-12-3 ☎531 ☎06-375-5050
 (中国) 名古屋市東区豊崎3-1-5 ☎466 ☎052-872-0371
 ● 電話受付時間 月～金曜日(祝日を除く)10時～16時
 ● 電話番号はよく確かめてお間違いのないようご注意ください。

発売元 株式会社バンダイ
 玩具第2事業部
 東京都台東区駒形2-5-4 〒111-81

玩具安全基準合格
 4902425 52702 4
ST 5
 日本玩具協会
 東京都台東区駒形4-2-4
 335225-0052702-3980
 4902425 52702 4